

## Seed feed distribution

## Spirit 400



Plug set up  
250 mm every second  
row closed

Plugs needed for the seed feed syst:


185961 16 (1 row shut off)

Note! Set tramline to disabled!

The machine will be offset because  
1 row shut off on left side and  
opened on the right.

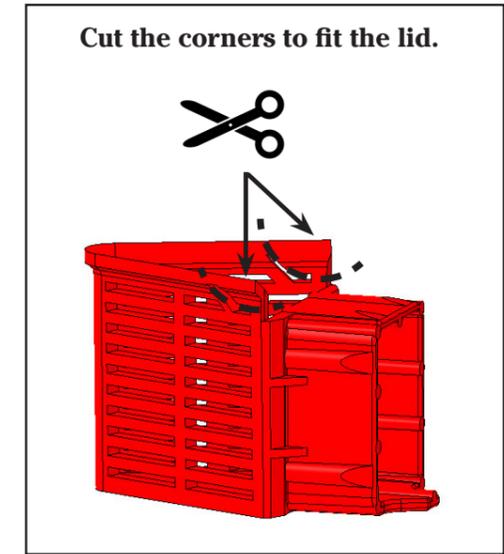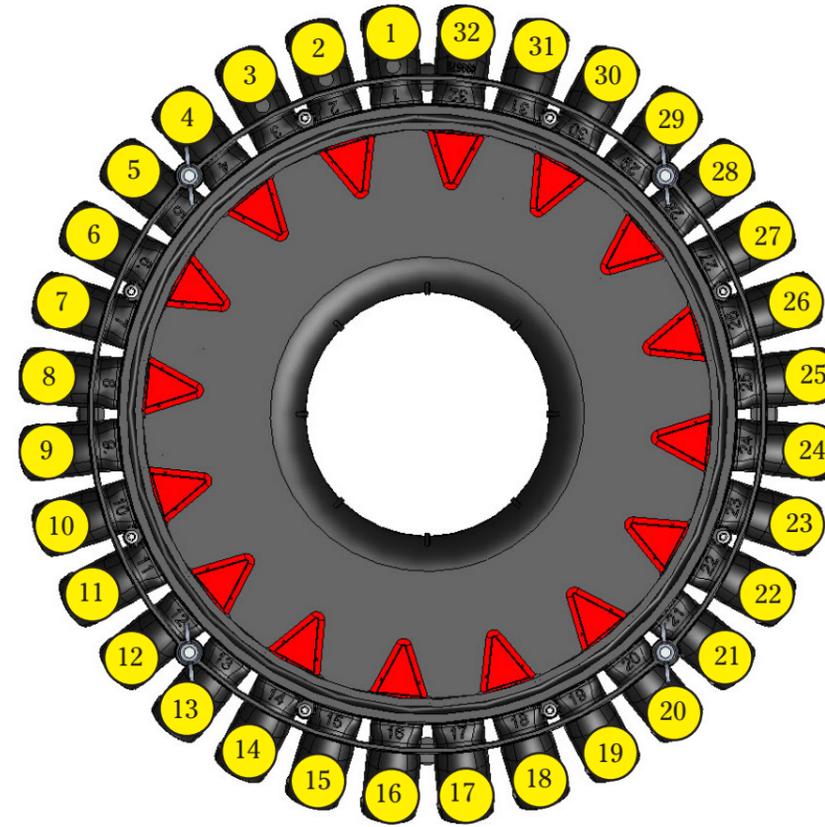


 = Change the hoses on  
the coulters.

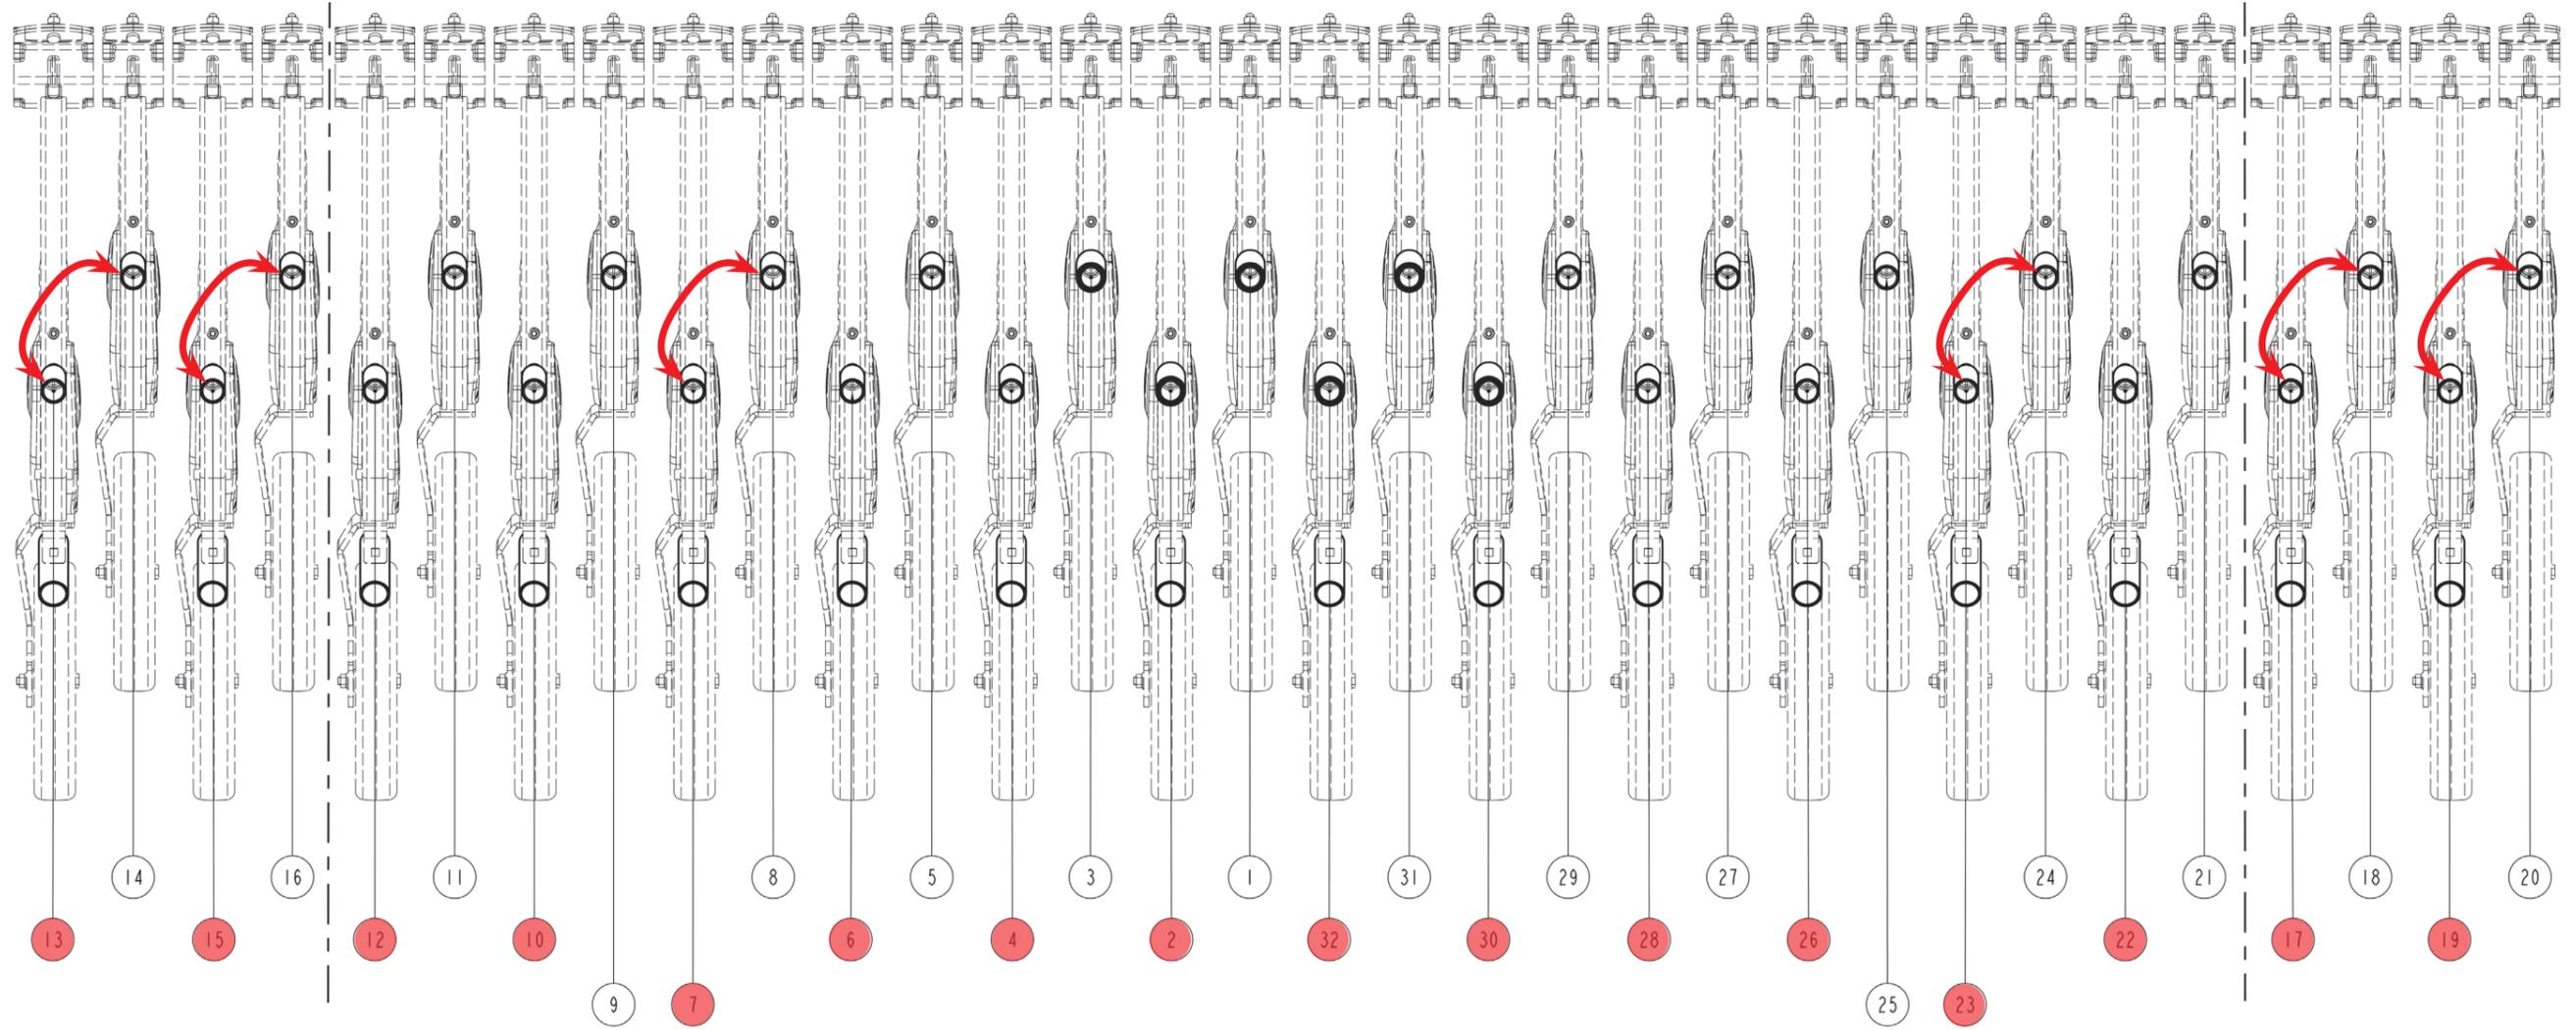


# Marker arm settings

## Left marker

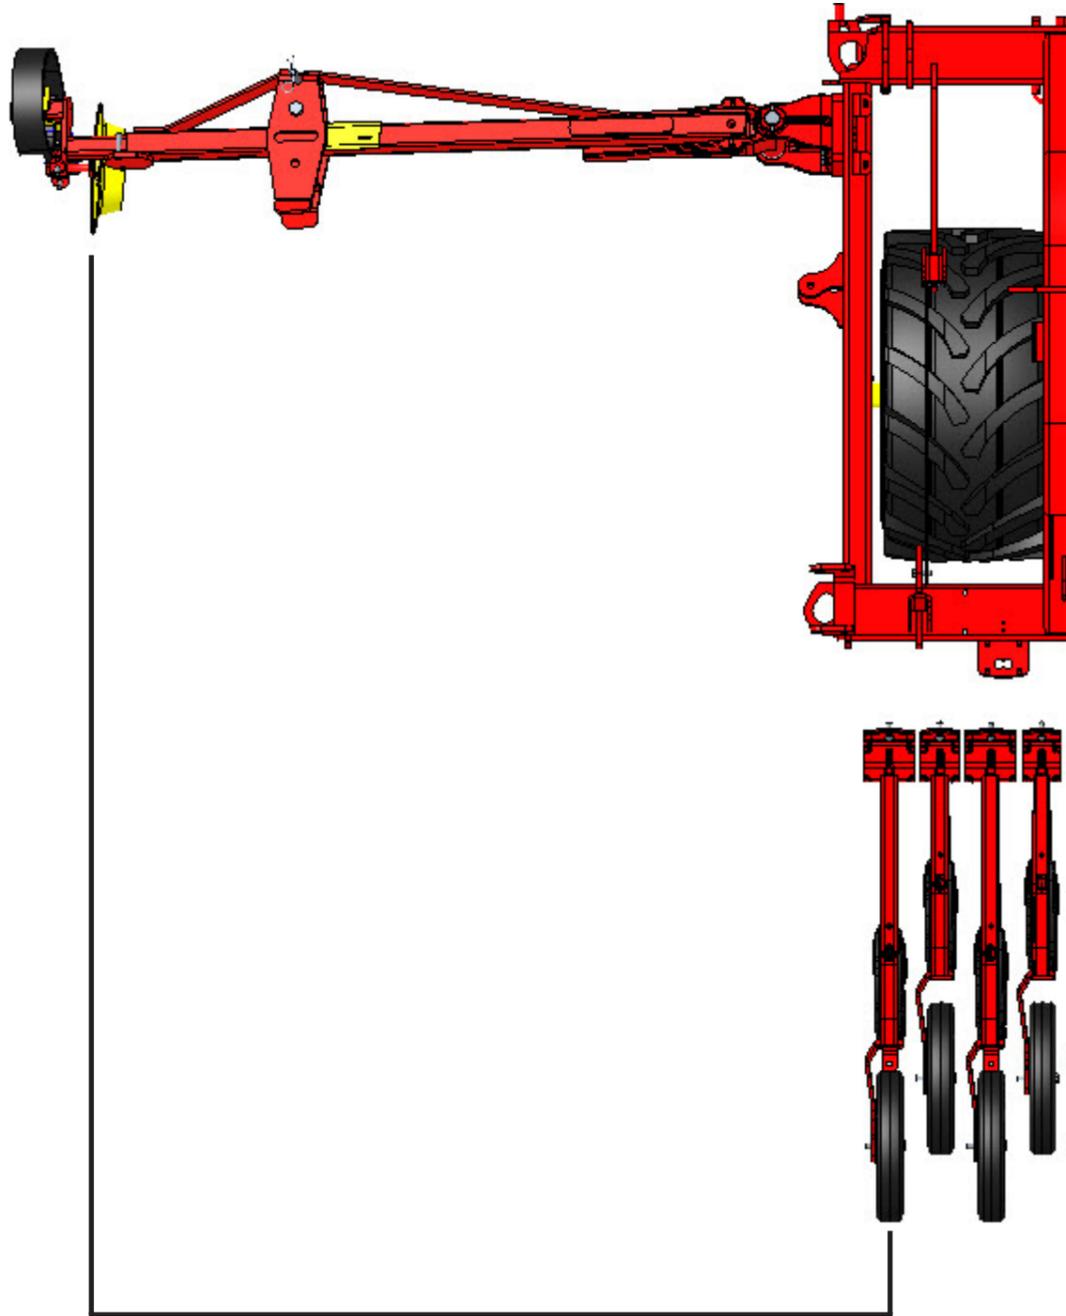

1,94 m

## Right marker

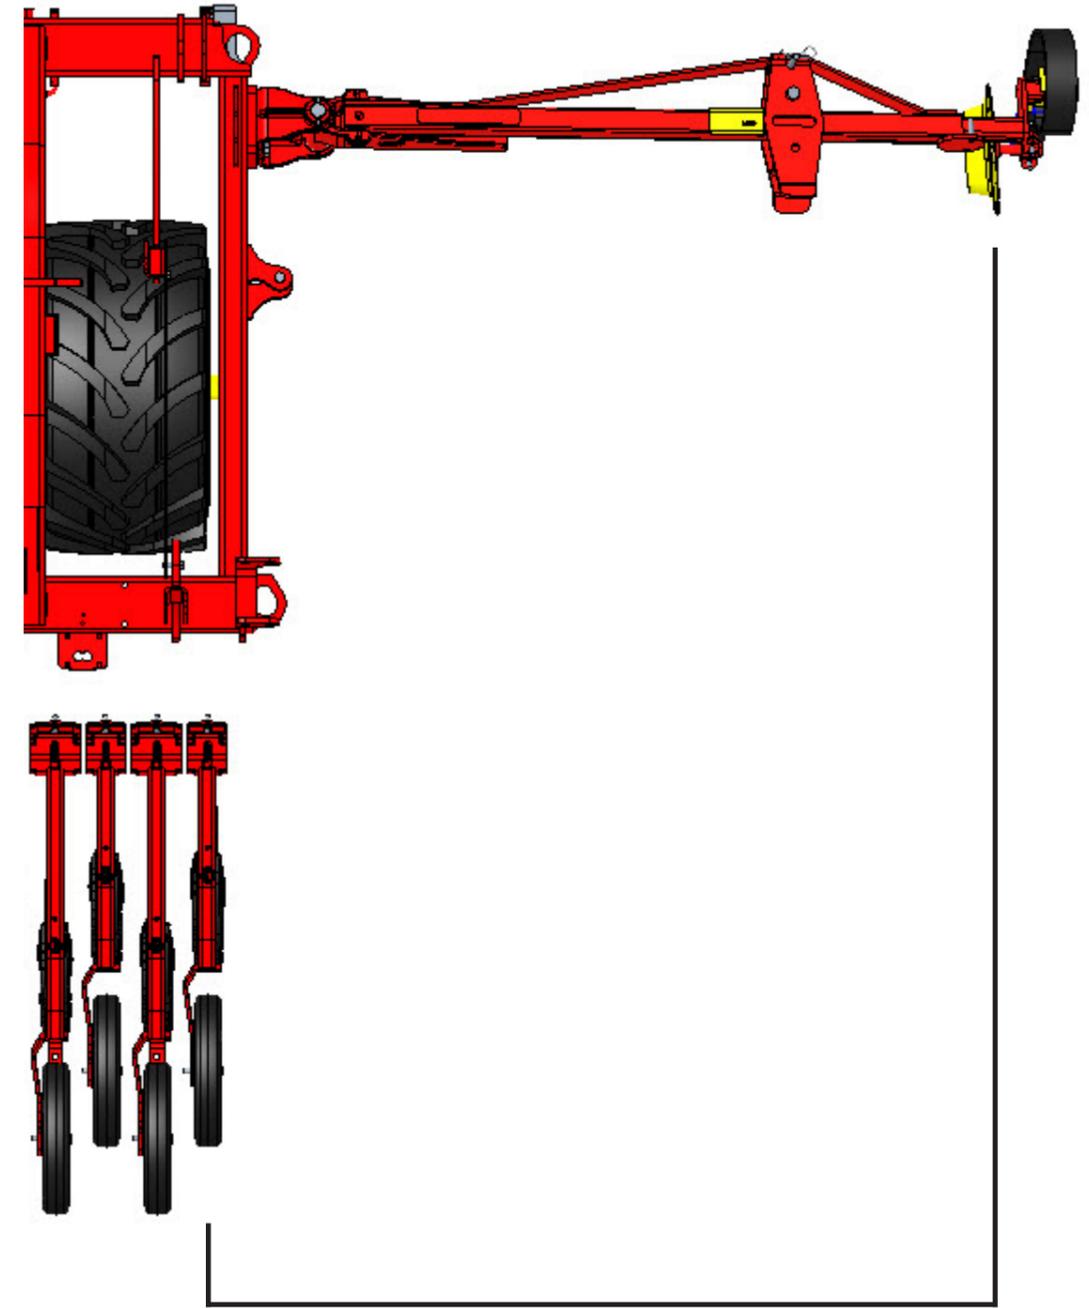

2,18 m